

ANGLE ADAPTER - instructions of use

- Unscrew the large back nut from the angle adapter and reasemble it to either side of the threaded part of the PROGUTTER scraper (sold separately).
 Once you have chosen your angle, tighten the large back nut to lock it in place.
- 2. Screw on a standard extension pole with a universal (acme) therad (pole not included).
- 3. Place the PROGUTTER scraper carefully into the gutter, then using the scraper move the gutter debris along to a point where it can be safely collected. Please note if the gutter contains a lot of debris you may need to collect the debris at more regular intervals.

We would recommend using a suitable pair of gloves when removing debris from gutters.